



INSTRUCTIONS FOR POI FLAG ASSEMBLY

HOW TO ASSEMBLE POI:


1. Obtain all the parts listed on page two.
2. Insert ball chain into the sleeves of each flag poi.



3. Sew the silk to the ball chain, gathering the silk as necessary to fit it to length of chain.



4. Connect the ball chain connectors to the ball chain.
5. Put the quick link through the connector and attach it to the handles.

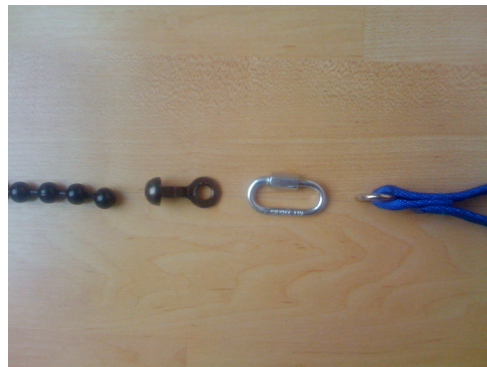

6. The completed assembly will look like this.





INSTRUCTIONS FOR POI FLAG ASSEMBLY

POI FLAG PARTS



What you will need:

- 2 3/8 inch ball chain*
- 2 1/8 inch Quick links
- 2 3/8 inch coupling connectors
- 2 Handles (not shown)
- 2 Silk Flag Poi (not shown)
- Needle and thread (not shown)

* Ball chain should be measured so that when spun from hip height (with the handles attached) the chain does not hit the floor.